

## **Explanation of "Capacity" and "Available Capacity" Fields on OASIS**

1. The results from running queries in the "Resale" area of OASIS (under the Resale tab) will include columns for both "Capacity" and "Available Capacity". The result(s) shown in the "Capacity" column is intended to be the MW quantity being offered for re-sale. The result(s) shown in the "Available Capacity" column are intended to be the MW quantity remaining of the offering that was posted for resale. Re-sellers have the option of selling less capacity than was granted in the original reservation.

Example:

Customer A has a confirmed reservation for 100 MW.

Customer A posts 50 MW of that confirmed reservation for resale.

At this point a resale offering is created showing Capacity = 50 (MW) and Available Capacity = 50 (MW).

Customer B requests to purchase 25 MW of the resale offering.

Once this reservation is CONFIRMED then the resale offering will show Capacity = 50 (MW) and Available Capacity = 25 (MW).

2. The results from running queries in the "Offerings" (under the Offerings tab) will include a column for "Capacity" but no column for "Available Capacity". The result(s) shown in the "Capacity" column is the MW quantity available for sale for that particular offering. APS must offer for sale all available transfer capability consistent with the OATT, FERC policy, NERC standards, and NAESB business practices.